

# INCENSE BURNER

Aroma and smoke for your home



**DENK**



## Made for smoking

Denk's *Incense Burner* is particularly thick-walled. There are air holes on the side so that the flame of the tea light gets good combustion air and creates a beautiful glow. The Incense Burner is designed so that it can be carried safely and comfortably.

The *Incense Burner* comes with an incense bowl made of heat-resistant natural porcelain and an insert made of Porosium® for incense charcoal.

Herbs and resins as well as aromatic oils and water can be used in the bowl. Thus, in addition to smoking, it can also be used as an aroma lamp.



## Smoking with the incense bowl

Use only standard height regular tea lights or maxi tea lights. The incense bowl is placed in the middle of the warmer. After about 3 minutes the bowl is hot and you can insert any incense you like.



## Use as an aroma lamp

Add water and aromatic oil to the bowl. Please only refill the bowl with warm water carefully, otherwise the material could break.

## Smoking with incense charcoal

Incense charcoal may only be used on the charcoal insert provided. Place the fireproof porosity insert into the incense burner with the feet facing down. The incense charcoal is positioned in the middle of the insert. Follow the charcoal manufacturer's safety instructions. When using incense charcoal, the incense bowl must not be used. The high heat could cause the bowl to break.

## Smoking with incense trays or incense sieves

You can also use trays and sieves with a diameter of at least 9.5 cm on the *Incense Burner*. Compared to the included incense bowl, these only offer the advantage of slightly faster fragrance release. However, they have the disadvantage that the incense burns just as quickly. Please note that they become very hot when used and there is a risk of burns.





## Attachment ring for use as a warmer

The *Incense Burner* can also be used as a warmer for drinks. We offer a ceramic ring to put on as an accessory. Tea or coffee mugs and even pots can then be kept warm on the warmer.



## Wool Mat

As accessories, we offer wonderfully soft wool fleece mats made exclusively for us. They are decorative and very practical at the same time. Scratching is prevented on sensitive areas, and at the same time the wool fleece shields heat.

## Cleaning

The *Incense Burner*, the incense bowl and the attachment ring can be cleaned by hand with detergent or in the dishwasher. If necessary, resin residues can be removed while warm using a wooden spatula. Depending on the incense, traces may remain on the incense bowl. They can usually be removed with a firm sponge and oxygen bleach. The incense bowl can be descaled using a lime dissolver.

The charcoal insert can be washed out by hand using detergent. It then has to dry out completely before it can be used again. Permanent discolouration on the contact surface of the charcoal is normal and cannot be removed.

## Safety notes

- The incense burner requires a safe, level place to stand when in use.
- Please note that the smoke can set off a smoke alarm.
- If soot forms on the underside of the incense bowl, this is an indication of poor tea light quality. Remove the soot and use a different tea light.
- For safety reasons, heat protection gloves should always be worn when moving the incense burner.
- When carrying it, make sure you move calmly and smoothly.
- Keep the incense burner away from easily flammable, heatsensitive and scratch-sensitive objects.
- There is a risk of burns if you touch the incense bowl or the charcoal insert.
- The incense burner may become hot after prolonged use. There is a risk of burns.
- Do not let children play with the incense burner.
- Do not leave the incense burner unattended when in use.
- Extinguish the incense burner when you leave the room.
- Only use suitable incense in small quantities.
- Be careful not to let the incense catch fire. A flame must be extinguished immediately with water, a fire extinguisher or a fire blanket.

Natural, durable  
materials

—

Respect for  
people and nature

—

Made by hand  
in Coburg

**DENK**

Denk Keramische Werkstätten  
Neershofer Straße 123–125 · D-96450 Coburg

+49(0)9563-51332-0 · kundenservice@denk-keramik.de  
[www.denk-keramik.de](http://www.denk-keramik.de)