


Glass Hood for the Outdoor Waxburner

Instructions for use

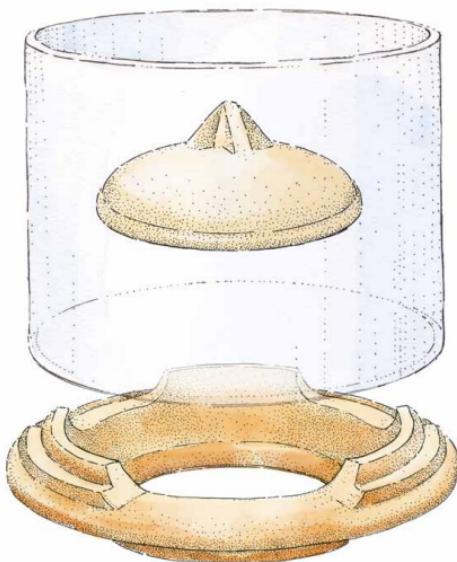

DeNK

UNIQUE CERAMICS
SINCE 1964

Glass Hood for the Outdoor Waxburner

The *Glass Hood* reflects the flame, intensifying the effect of the light for a particularly attractive and safe lighting experience. It can be used anywhere outdoors, e.g. in your garden, on your balcony or on the veranda, wherever you want to create an atmospheric lighting effect.

The *Glass Hood* is made up of three parts: ring base, glass hood and lid for extinguishing. A *Glass Hood* is available to fit each *Outdoor Waxburner* model.

The *Glass Hood* is handmade from high-quality borosilicate glass. Used with the *Glass Hood*, the *Waxburner* gives off a warm, romantic light. The *Glass Hood* prevents accidental contact with the flame and keeps children and adults safe.


Each Waxburner comes with instructions for use. It is important to follow these instructions when using the Waxburner with *Glass Hood*. If you lose the instructions, you can read them, request new ones or print them out at www.wax-burner.com/service

Set up & lighting

Put the ring base onto the Waxburner. You can now light the Waxburner. The best way of doing this is by using a conventional stick lighter. Then, put on the *Glass Hood*.

Vivid flame

Air flows in under the *Glass Hood* and creates a vivid, moving flame. The *Glass Hood* reflects the light, which increases its brilliance.

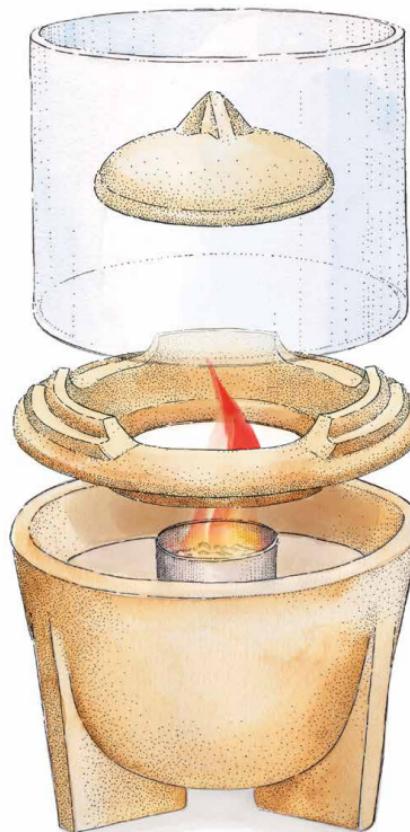

Touching the Glass Hood when in use

If the Waxburner is working correctly, the glass will become warm, but not hot. The glass might become hot if the flame is too big. For safety reasons, only touch the glass with a heatproof glove when in use. There is a risk of burning.

Sooty glass

Slight sooty traces on the glass are normal. Heavier sooting is a sign of a strong wind, a flame that is too high or poor-quality wax. You might need to de-soot and re-adjust the wick of the Waxburner and change the wax. Please follow the procedure in the instructions for using the *Outdoor Waxburner*. The glass is easy to clean by hand with washing-up liquid or in the dish-washer.

Extinguishing the flame

Place the lid supplied onto the opening of the base ring to extinguish the flame. You can do this without removing the *Glass Hood*. For safety reasons, please wear a heatproof glove.



Refilling & recycling leftover candles

The wax needs to be topped up regularly so that the *Waxburner* doesn't run out. To do so, extinguish the *Waxburner* and remove the *Glass Hood* and the ring base. The *Waxburner* uses more wax in strong winds so normal burning time might be shorter.

Adding essential oils and insect repellent

If you add essential oils (e.g. our *Anti-insect oil*) to the wax, the effect of the scent will be just as pleasant and long-lasting as with a *Waxburner* used without the *Glass Hood*.

In rain and during winter

The *Glass Hood* does not protect against moisture penetration. Water in the bowl can prevent the *Waxburner* from working properly and cause damage in icy conditions, so the *Waxburner* and *Glass Hood* must be stored in a dry place where they are safe from frost.

Cleaning

If required, the *Glass Hood* and the ceramic parts can be washed in the dishwasher or by hand using washing-up liquid.

Accessories



Wax pastilles refill
SFP2 2kg
SFP4 4kg



Various pure
essential oils



Stainless
steel stand

Safety information & instructions

- Only use the *Outdoor Waxburner with Glass Hood* outside.
- Only use candle wax in the *Waxburner*. The correct function of your *Waxburner* depends on the quality and ingredients of the wax used. You can find tips at www.wax-burner.com/service
- The *Waxburner* must be positioned on a secure, even surface during use.
- Only move the *Waxburner* when it is not in use and the wax has hardened.
- The wax becomes hot and runny during use, and can cause injuries if it comes into contact with the skin.
- The *Glass Hood* can become hot during use, resulting in a risk of burning.
- Please do not allow children to play with the *Waxburner*.
- Keep the *Waxburner* away from highly flammable, heat-sensitive, scratch-prone objects.
- Do not leave the lit *Waxburner* unattended.
- Extinguish the flame if you are going to leave it unattended.
- Only use the *Waxburner* if it is protected from rain and water. The lid will not prevent rainwater from getting in.
- The ceramic is frost-proof as long as there is no water in the bowl.
- Extinguish the *Waxburner* if the flame becomes sooty, if there is an unpleasant odour or if the *Glass Hood* becomes very sooty. This could be because the wick is adjusted incorrectly, has become stuck together or because the wax is poor quality.
- Solutions to problems are described in the instructions for the *Outdoor Waxburner* (www.wax-burner.com/service)



Natural materials

—
Unique handmade pieces

—
Lasts for decades

—
Respect for people
and nature

—
Resource-efficient
manufacture

—
Made in Germany

Denk Keramische Werkstätten
Neershofer Straße 123–125 · D-96450 Coburg

+49 (0)9563-51332-0 · info@denk-keramik.de
www.denk-keramik.de