


WAXBURNER GLASS HOOD

Instructions for use

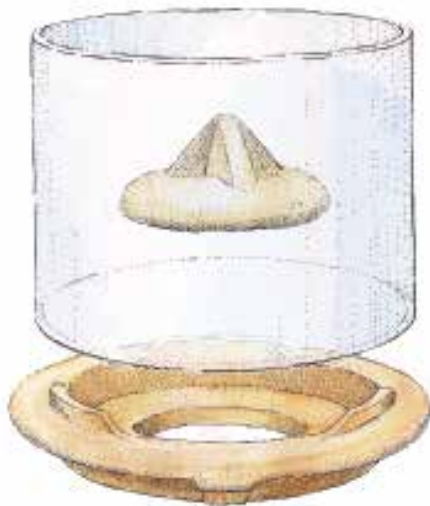

DENK

UNIQUE CERAMICS
SINCE 1964

Glass hood for the Indoor Waxburner

The *Glass Hood* makes the *Indoor Waxburner* windproof and creates a stunning light feature. It is perfect for use on your garden table, balcony or veranda, but the *Waxburner* can also be used with the *Glass Hood* indoors.

The *Glass Hood* is made up of three parts: Ring base, glass hood and lid for extinguishing. A *Glass Hood* is available to match each *Indoor Waxburner* model.

The *Glass Hood* is handmade in Germany from high-quality borosilicate glass. The brilliant glass reflects the vivid frame and intensifies the effect of the light. Used with the *Glass Hood* the *Waxburner* gives off a warm, romantic light. The *Glass Hood* also prevents accidental contact with the flame and keeps children and adults safe.


Each *Glass Hood* comes with instructions for use. It is important to follow these instructions when using the *Waxburner* with *Glass Hood*. If you lose the instructions, you can read them, request new ones or print them out at www.wax-burner.com.

Set up & lighting

Put the ring base onto the *Waxburner*. You can now light the *Waxburner*. The best way of doing this is by using a conventional stick lighter. Then, put on the *Glass Hood*.

Vivid flame

Air flows in under the base ring and creates a vivid, moving flame. The *Glass Hood* reflects the light and increases its brilliance.

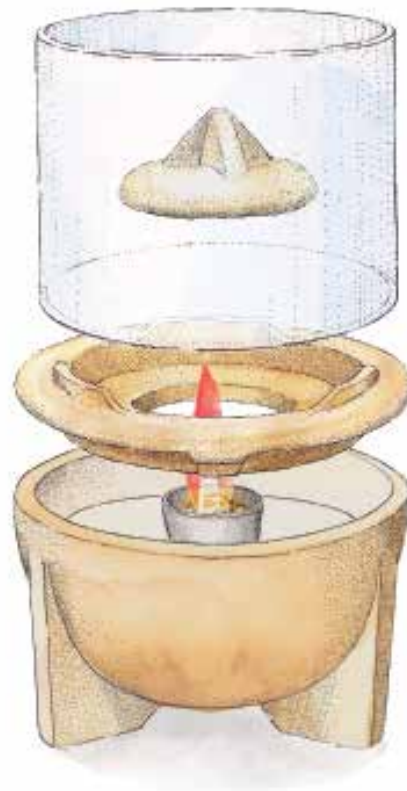

Touching the Glass Hood when in use

If the *Waxburner* is working correctly, the glass will become warm, but not hot. The glass might become hot if the flame is too big. For safety reasons, only touch the glass with a heatproof glove when in use. Sooty glass is a sign that the flame is too high and/or that the wax is poor-quality. You will then need to re-adjust the wick of the *Waxburner* and/or change the wax. Please follow the procedure in the instructions for using the *Indoor Waxburner*.

Extinguishing the flame

Place the lid supplied onto the opening of the base ring to extinguish the flame. You can do this without removing the *Glass Hood*.

Refilling & recycling leftover candles

The wax needs to be topped up regularly so that the *Waxburner* doesn't run out. To do so, extinguish the *Waxburner* and remove the *Glass Hood* and the ring base. The *Waxburner* uses more wax in strong winds so normal burning time might be shorter.



Adding essential oils and insect repellent

If you add essential oils (e.g. our Anti-insect oil) to the wax, the effect of the scent will be just as pleasant and long-lasting as with a *Waxburner* used with the *Glass Hood*.

In rain and during winter

The *Glass Hood* does not protect against moisture penetration. Water in the bowl can prevent the *Waxburner* from working properly and cause damage in icy conditions. The *Waxburner* and *Glass Hood* must be stored in a dry place where they are safe from frost.

Cleaning

If required, the *Glass Hood* and the ceramic pieces can be washed in the dishwasher or by hand using washing-up liquid.

Accessoires



Wax pastilles refill
SFP2 2 kg
SFP4 4 kg



Spring oil
SFD-FR | 10 ml



Aroma of Gold oil
DS-AG | 10 ml



Summer oil
SFD-SO | 10 ml



Relax oil
SFD-RE | 10 ml



Autumn oil
SFD-HE | 10 ml



Winter Dreams oil
SFD-WD | 10 ml



Winter oil
SFD-WI | 10 ml



Swiss Pine oil
SFD-ZI | 10 ml



4 seasons multipack
SFD-4J | 4 x 10 ml



Anti-insect oil
SFD-AI | 30 ml

Safety information & instructions for use

- Only use candle wax in the *Waxburner*. The safe function of your *Waxburner* depends on the quality and ingredients of the wax used. You can find tips in our candle guide at www.wax-burner.com/service
- The *Waxburner* must be positioned on a secure, even surface during use.
- Only move the *Waxburner* when it is not in use and the wax has hardened.
- The wax becomes hot and runny during use, and can cause injuries if it comes into contact with the skin.
- The *Glass Hood* can become hot during use, resulting in a risk of burning.
- Please do not allow children to play with the *Waxburner*.
- Keep the *Waxburner* away from highly flammable, heat-sensitive, scratch-prone objects.
- Do not leave the lit *Waxburner* unattended.
- Extinguish the flame if you are going to be leaving it.
- Only use the *Waxburner* if it is protected from rain and water. The lid will not prevent rainwater from getting in.
- The ceramic is frostproof as long as there is no water in the bowl.
- Extinguish the *Waxburner* if the flame becomes sooty, if there is an unpleasant odour or if the *Glass Hood* becomes hot. This could be because the wick is adjusted incorrectly, has become stuck together or because the wax is poor quality. Solutions to problems are described in the instructions for the *Indoor Waxburner* (www.wax-burner.com).



Natural materials

—

Unique handmade pieces

—

Lasts for decades

—

Respect for people
and nature

—

Resource-efficient
manufacture

—

Made in Germany

Denk Keramische Werkstätten
Neerschofer Straße 123–125 · D-96450 Coburg

+49 (0)9563-51332-0 · info@denk-keramik.de
www.denk-keramik.de